

# The Hardness Comparison of May Clean Gel

**Confidential**

## ■ Examination Purpose

The hardness comparison of May Clean Gel.

## ■ 評価サンプル

- MGCS (6t)
- MGSF (6t)
- MGU (6t)
- MGSRTD (6t)
- MGSi (6t)



## ■ Test Method

The hardness measurement

- ① I laminate a sample of thickness 0.5t and make a specimen of the thickness of 6t.
- ② I keep a specimen in 23 degrees Celsius, 50%RH for 30 minutes.
- ③ I measure the hardness of the specimen using durometer GS-701N.

## ■ Test Results

The hardness of May Clean Gel showed a high tendency in order of **MGSRTD > MGCS > MGSi > MGSF = MGU**.

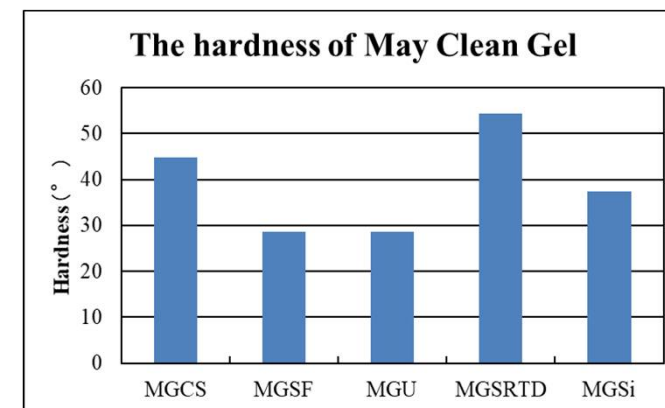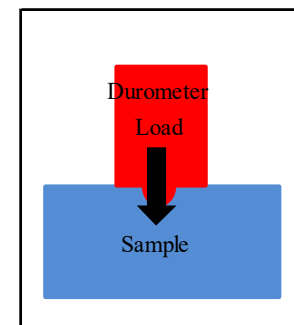

Product	MGCS	MGSF	MGU	MGSRTD	MGSi
Hardness	44°	28°	28°	54°	37°